VERSION 3 USER MANUAL

TV Lifting System


Contents

Со	ntents	S		3
1.	Over	rview		4
2.	Syst	em Intr	oduction	5
	2.1	Packa	ige Contents	5
	2.2	Appea	arance	6
	2.3	Specif	fications	7
		2.3.1	2D drawing of the TVL3 lifting column	7
	2.4	Install	ation guide	12
	2.5		ıg started	
		2.5.1	Concealed Switch Box : Setting the desired maximum height	14
		2.5.2	IR Control: Setting the lift height	16
		2.5.3	RF Control-TH3: Setting the lift height	17
			Operation	
	2.6	Safety	/ (for end users)	19

1.0verview

- Column: TVL3
- Control Box: TC11
- Controls: TH3 and IR Control
- Accessories: TJB2 Junction Box
 TSS Safety Switch (optional), and Concealed Switch Box

The TVL3 series columns are primarily designed for use as TV lifts, but can be used in other applications that require vertical movement using a remote control. Our steel constructed TVL3 is available in three sizes depending on the requirements of the application. An extended height position can be programmed using our remote control.

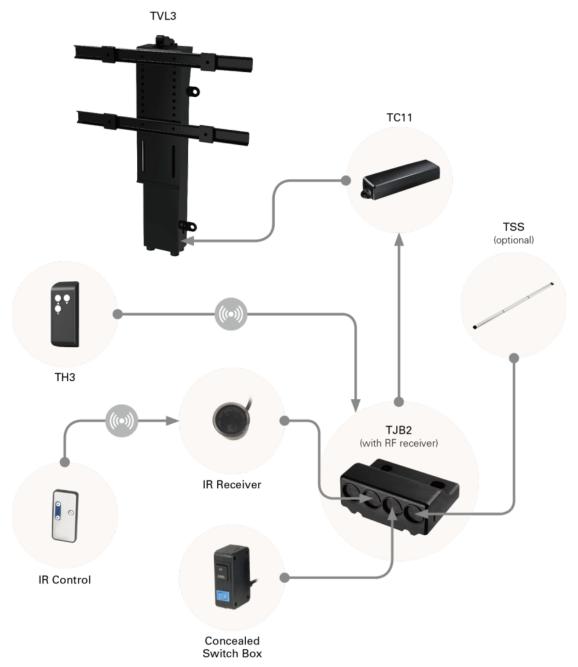

2.System Introduction

2.1 Package Contents

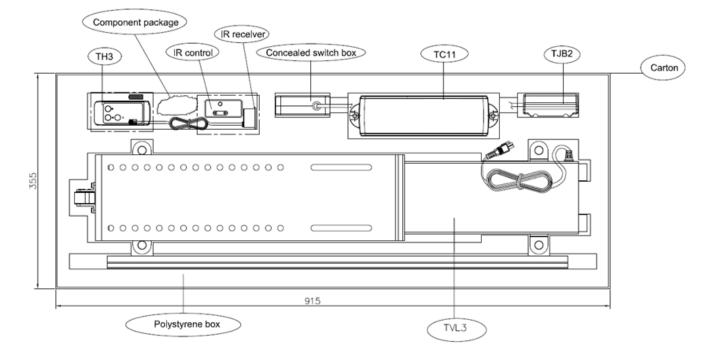


Chart A: List of the package content


No.	Description	Model Name	Q'ty
1	Lift Column	TVL3	1pc
2	Control Box	TC11	1 pc
3	Control	ТНЗ	1 pc
4	Control	IR Control	1 pc
5	Accessory	TJB2	1 pc
6	Accessory	Concealed switch box	1 pc
7	Accessory	Power cord	1 pc
8	Accessory (optional)	TSS	
9	Component Package	Refer to the following chart for more details	1 set
		(page 9~10)	

2.2 Appearance



2.3 Specifications

2.3.1 2D drawing of the TVL3 lifting column

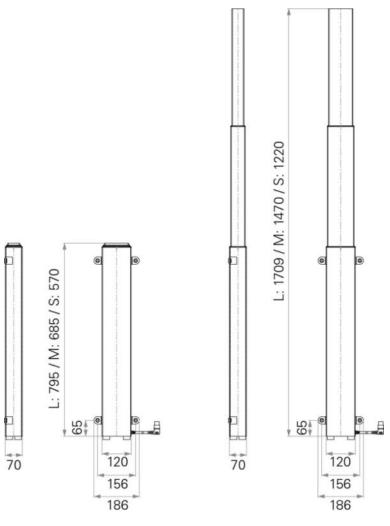



TVL3 Specifications

Size	Retracted	Stroke	Fixing Hole	Max. Load	Speed (mm/sec)	Recommended
	Length	(mm)	Distance	(N)		TV Size (inch)
	(mm)		(mm)			(Note)
Large	795	914	650	600	◆ 35 mm/s at	50"~70"
Medium	685	780	545		no load • 20 mm/s at	40"~55"
Small	570	650	430		full load	32"~43"

Note: It is based on the current primary plasma TV screen size.

Other components

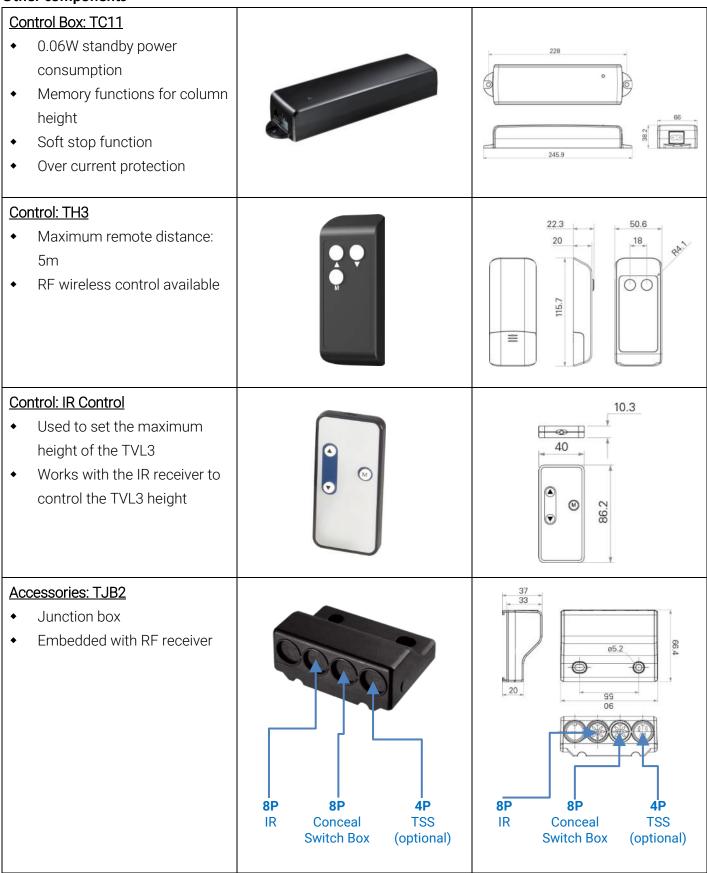

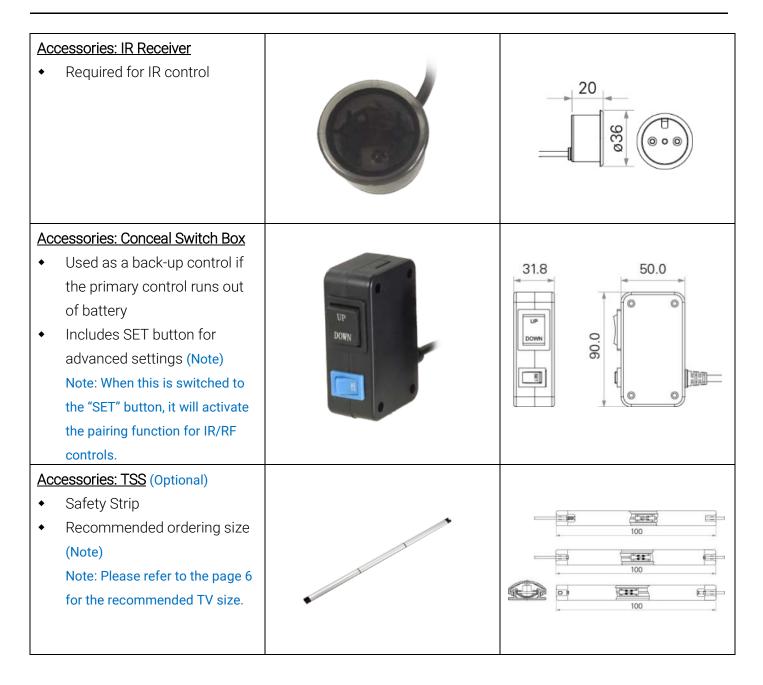

Component Package List

No.	Description	Drawing	Q'ty (pcs)
1	Wheel (Ø18* Ø8*20L)		3
2	Shaft (Ø8* Ø8*28L)	6	3
3	Shaft Holder	0	1
4	Shaft Holder	0000	1
5	Screw (M5*8L)		4
6	Manual Screw (M5*10L)		1
7	Washer (M8)	\bigcirc	8
8	Slider (40*14*3t)		4

9	Screw (M8*15L)	8
10	Handle	1
11	Screw (M6*24L)	4

2.4 Installation guide

Important information:

- Prior to installation onto the TVL3, remove the stand which is attached to your flat screen TV.
- Carefully measure all dimensions of the television before proceeding with the installation.

Step 1: Secure the TV

Lean the TV onto its edge, preferably against a soft surface to prevent scratches and or damage.

Step 2: Install the Mounting Plates (Fig. 1)

Find the 4 mounting holes on the back of your TV and then choose the 4 screws from the component package that work best for your TV. Install the included 4x TV mounting sliders (item 8) onto the back of the TV.


Step 3: Install the Mounting Brackets (Fig 2)

Fix the 4 TV mounting sliders (with TV attached) to the TV mounting bars by sliding onto the bars. Step 4: Mount the TV to the TVL3 (Fig 3)

With the TV now attached to the 2 x horizontal bars, fit bars to main TV bracket using 4 M8 screws (item 9). Adjust the bars using the series of vertical holes to ensure the top of the TV is approximately 5mm below the apex of the 3 rollers.

Step 5: Mounting the TV on the Lift (Fig 4)

Fit the brackets (with the TV attached) using the 4 M6 screws (item 11) to the top of the main bracket and tighten the screws with handle (item 10).

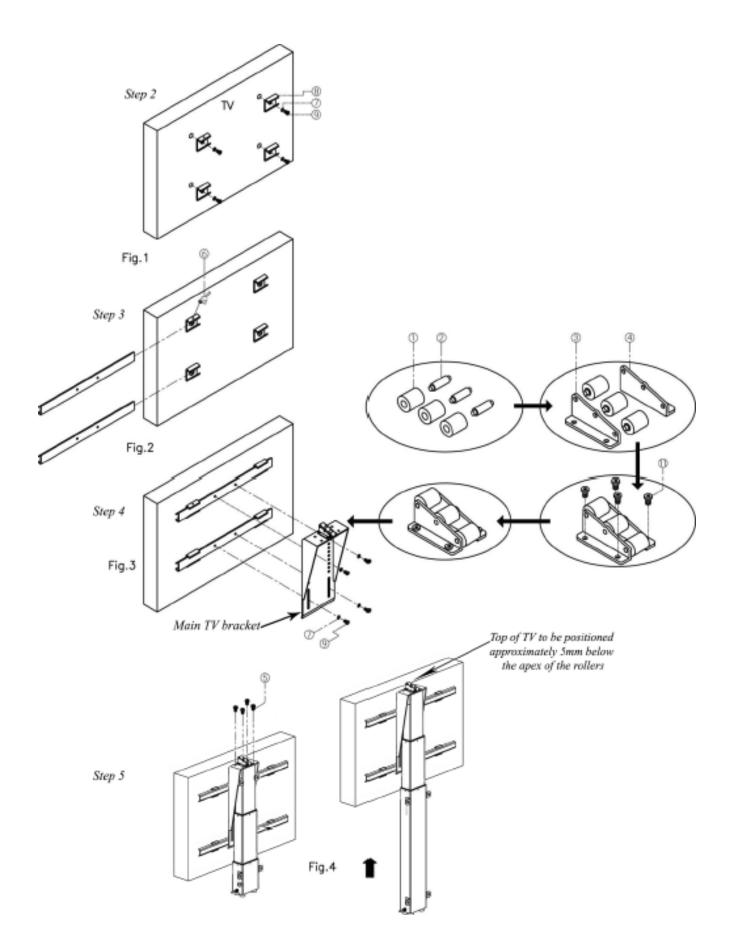

2.5 Getting started

2.5.1 Concealed Switch Box : Setting the desired maximum height

How to set the desired lift height

Press and hold the up or down button to the desired height, release the button, and then switch SET to the "ON" position. An audible tone will sound three times from the TC11 control box, which confirms the height has been memorized.

How to recall the desired lift height

After the desired height is memorized, when the SET switch is moved to the "ON" position and then immediately to the "OFF" position, the column will move to the memorized position automatically.

How to disable the desired lift height

Switch SET to the "ON" position until you hear the TC11 control box beep once. This tone confirms the desired lift height is disabled. Then, move the SET switch to the "OFF" position.

How to set the maximum desired lift height limit?

Press UP until the maximum desired height is reached; switch SET to "ON", and then press and hold the "UP" button for **3** seconds until you hear two audible beeps from the TC11 control box. Then, switch SET to "OFF" and the maximum desired height limit is saved to memory.

How to disable the <u>maximum desired lift height limit?</u> Switch SET to "ON", then press and hold the UP button for **3** seconds until the TC11 control box beeps once. Switch SET to "OFF". Now, the height limit is disabled.



Note:

The SET button on the concealed switch box is a rocker switch. If you switch it to the right side, it means "ON"; the opposite (left) side meaning "OFF".



How to set the minimum desired height limit? (Note)

Press UP/DOWN to the desired minimum height, release UP/DOWN, and switch SET to "ON". Then, press and hold the "DOWN" button for **3** seconds until the TC11 beeps twice. Switch SET to "OFF" to complete saving the minimum height to memory.

How to disable the memorized minimum height limit? (Note)

Press DOWN to the set minimum height, release DOWN, and then switch SET to "ON". Press and hold the "DOWN" button for 3 seconds until the TC11 beeps once. Switch SET to "OFF" to complete the process.


Note: This is primarily used when the TVL3 is installed within a TV cabinet.



2.5.2 IR Control: Setting the lift height

Press and hold the "▲" button on the IR Remote Control. The TVL3 will continuously travel upwards. Press and hold the "▼" button on the IR Remote Control. The TVL3 will continuously travel downwards	
 How to set the memorized height Once the desired height has been reached, press and hold the "M" button until the TC11 beeps 3 times. This confirms the desired height is saved to memory. Click "M" and the TVL3 will automatically travel to the memorized height. How to disable the memorized height Press and hold the "M" button until the buzzer on the TC11 beeps once. 	

2.5.3 **RF Control-TH3: Setting the lift height**

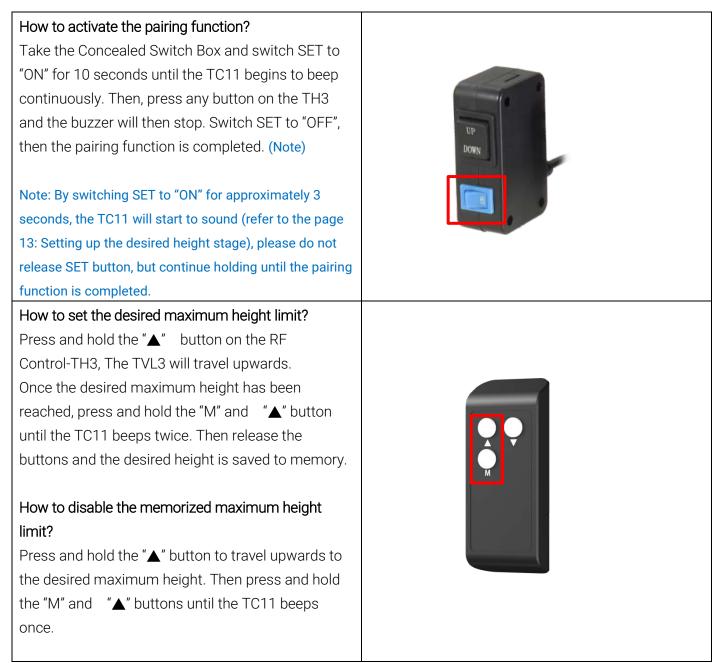

How to set the desired minimum height limit?
Press and hold the " $\blacktriangle/ abla$ " button on the RF
Control-TH3 to adjust TVL3. Once the desired
minimum height has been reached, press and hold
the "M" and " $ullet$ " buttons until the TC11 beeps
twice. Then release the buttons and the desired
minimum height is saved to memory.
How to disable the memorized minimum height
limit?
Press and hold the " $\mathbf{\nabla}$ " button travel downwards
to the desired minimum height. Then press and hold
the "M" and " $\mathbf{\nabla}$ " buttons until the TC11 beeps
once.
How to set the memorized height
Once the desired height has been reached, press
and hold the "M" button until the TC11 beeps 3
times. This confirms the memorized height is now
saved to memory. Click "M" and the TVL3 will
automatically travel to the memorized height.
How to disable the memorized height
To disable the memorized height, press and hold the
"M" button until the TC11 beeps once.

2.5.4 Operation

Once the memorized height of the TVL3 column is set, users can use either the control-TH3 or IR Control to control movement of the lifting system.

- (1) Press and hold the \blacktriangle symbol to move the column upwards.
- (2) Press and hold the $\mathbf{\nabla}$ symbol to move the column downwards.
- (3) Release the button at any time to stop the column's movement.
- (4) The Concealed Switch Box serves as a back-up control if both the TH3 and IR Controls are out of battery.

2.6 Safety (for end users)

- (1) Please adhere to the proper installation procedure as detailed in the installation instructions.
- (2) Safety precaution measures must be practiced at all times during installation of this product.
- (3) The entire installation instructions should be fully read and understood before beginning installation.
- (4) At least two people should be available to mount the TV on the lift mechanism. Please take care when handling your flat screen TV as injury and damage can result from dropping or mishandling of the TV.
- (5) TV's should remain upright at all times. Never place screen face down on the floor. This could cause damage to the TV.
- (6) The stand on your flat screen TV is removable. Please remove the stand prior to installing the TV on the lift mechanism. Consult your TV's owner's manual for instructions for removing the stand.
- (7) Carefully measure all dimensions of your LCD, PLASMA, or LED TV before proceeding. Then consult the Specification section of this manual for maximum acceptable TV size.
- (8) The TV Lift Mechanism contains moving parts. Please keep hands, arms, and fingers away from the lift and cabinet lid opening when the lift is in motion. Cables should be wire-tied or secured neatly so the lift does not contact them during operation.
- (9) About the TSS Safety Strip accessory The TSS safety strip is an optional accessory which can be installed onto the bottom of the TV. To avoid the risk of personal injury, the TSS will stop the lift column once the strip is pressed.